

Part No 67933  
Revised April 2009

# Sno-Konette

## Instruction Manual


Deluxe – Model #1002S  
Standard – Model #1003S





**FUNFOOD EQUIPMENT & SUPPLIES**

Cincinnati, OH 445241-4807 USA


# SAFETY PRECAUTIONS


	<b>⚠ DANGER</b>
	Machine must be properly grounded to prevent electrical shock to personnel. Do not immerse the equipment in water. Keep cord and plug off the ground, and away from moisture. Always unplug the equipment before cleaning or servicing.

	<b>⚠ WARNING</b>
	Never put your fingers or any object into the shaver body (the goose-neck) while the motor is running. Serious injury may occur. <i>(Gold Medal Products does not assume any liability for injury due to careless handling and/or reckless operation of this equipment).</i>

	<b>⚠ WARNING</b>
	Always wear safety glasses when servicing this equipment.

	<b>⚠ WARNING</b>
	Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.

	<b>⚠ CAUTION</b>
	This equipment is sold for commercial use only. This equipment is NOT to be used by the general public for home use. Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operating the equipment.

	<b>⚠ CAUTION</b>
	This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18

**NOTE**  
The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

## MACHINE DESCRIPTION

The Sno-Konettes are manual ice shavers with a tremendous capacity. The Sno-Konette consists of the hopper, which houses the cutter head, the pusher handle, the motor, and the display case.

## ELECTRICAL REQUIREMENTS

The Sno-Konette operates on 120 Volt, 15 Amp, single phase, 60 cycle AC current. Be sure that your electrical supply meets this requirement.

## ICE REQUIREMENTS

The Sno-Konette can take ice cubes or block ice, if you break the block into pieces approximately 3 to 4 inches in size.

**NOTE:** The ice will not enter the shaving chute if the pieces are too large.

## **MACHINE OPERATION**

After unpacking the Sno-Konette you should locate the pusher handle (packed in a separate box). Connect the pusher handle to the shaver body. Plug the power cord into the appropriate electrical outlet.

## TO OPERATE THE SNO-KONETTE

1. Fill the hopper to within an inch of the top with ice cubes or block ice (no larger than 3" to 4"). The larger the pieces, the better the snow.
2. Switch the motor on. Wait for the motor to come to full speed (a minute or so).
3. Push the pusher handle down against the ice in the hopper. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the shaver head. You may find that you need to relieve the pressure two or three times in a cycle. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.

**NOTE:** Never allow any foreign or metallic objects around the shaver area of the Sno-Konette. Ice picks, scoops, and debris that may be in the ice often damage blades.